

# CHRONOS 12 PLATFORM LENS MOUNT

## Instruction Manual

### Includes:


Items	Thickness, mm	Quantity
Screws	M4x8	4
Hex L-Key	3	1
Adapter Cap	-	1
Metal Shim (Black)	1.0	1
Shims (Black)	0.6	2
Shims (Red)	0.5	2
Shims (White)	0.3	4
Shim (Black)	0.2	1

When using a different lens that requires a different lens mount please do the following:

1. Ensure that the camera is turned off and unplugged.
2. Remove any attached lens.
3. Remove the four (4) M4 x 8 mm long socket head screws with the included 3 mm Hex key. See Fig. 1.
4. Align the 1 mm black metal shim on the front of the camera
5. Align the lens mount on the front of the camera.
6. Install and loosely tighten the four (4) M4 x 8 mm socket head screws.
7. Tighten the four (4) lens mount screws evenly in a cross pattern ("X" pattern). See Fig. 2.

**Warning: Do not overtighten.**

**Fig. 2. Cross Pattern for Screw Installation**

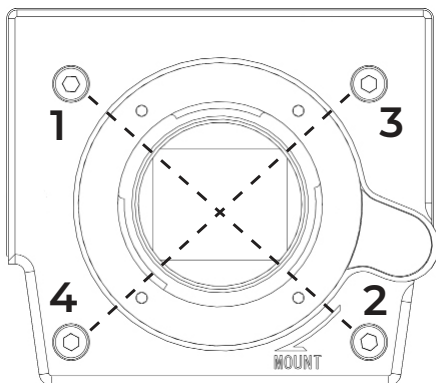

### Lens Mount for your Chronos 12 Platform


The Chronos 12 Platform accepts six different lens mounts; E, F, EF, MFT, C, and PL.

The camera is shipped with a pre-installed 1 mm black metal shim between the camera body and the lens mount.

Please reuse this shim when swapping lens mounts. The thickness of the shim sets the backfocus. Proper shim thickness is crucial to achieve accurate lens focus distance.

**Reminder:** Chronos Lens Mounts are passive and do not support electronic focus or aperture control.

**Fig. 1. Remove Screws with Hex Key**

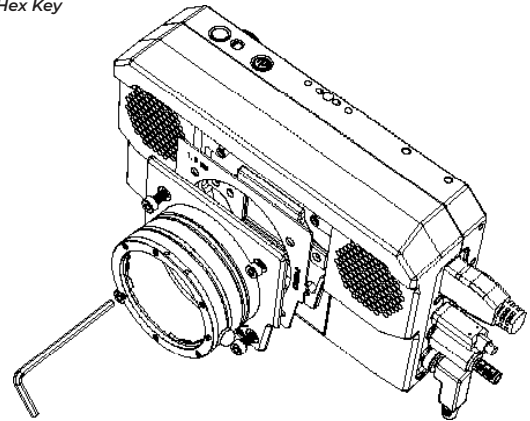

### 90-Day Limited Warranty

This Kron Technologies Inc. product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of 90 days from the original purchase date. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment.

Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. To obtain warranty coverage, contact the Kron Technologies Inc. Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Kron Technologies Inc. along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.krontech.ca](http://www.krontech.ca), call Customer Service at 1(778)819-1182 or email Customer Service at [support@krontech.ca](mailto:support@krontech.ca)

Product warranty provided by Kron Technologies Inc. [www.krontech.ca](http://www.krontech.ca)